


**5**  
**G**  
**E**

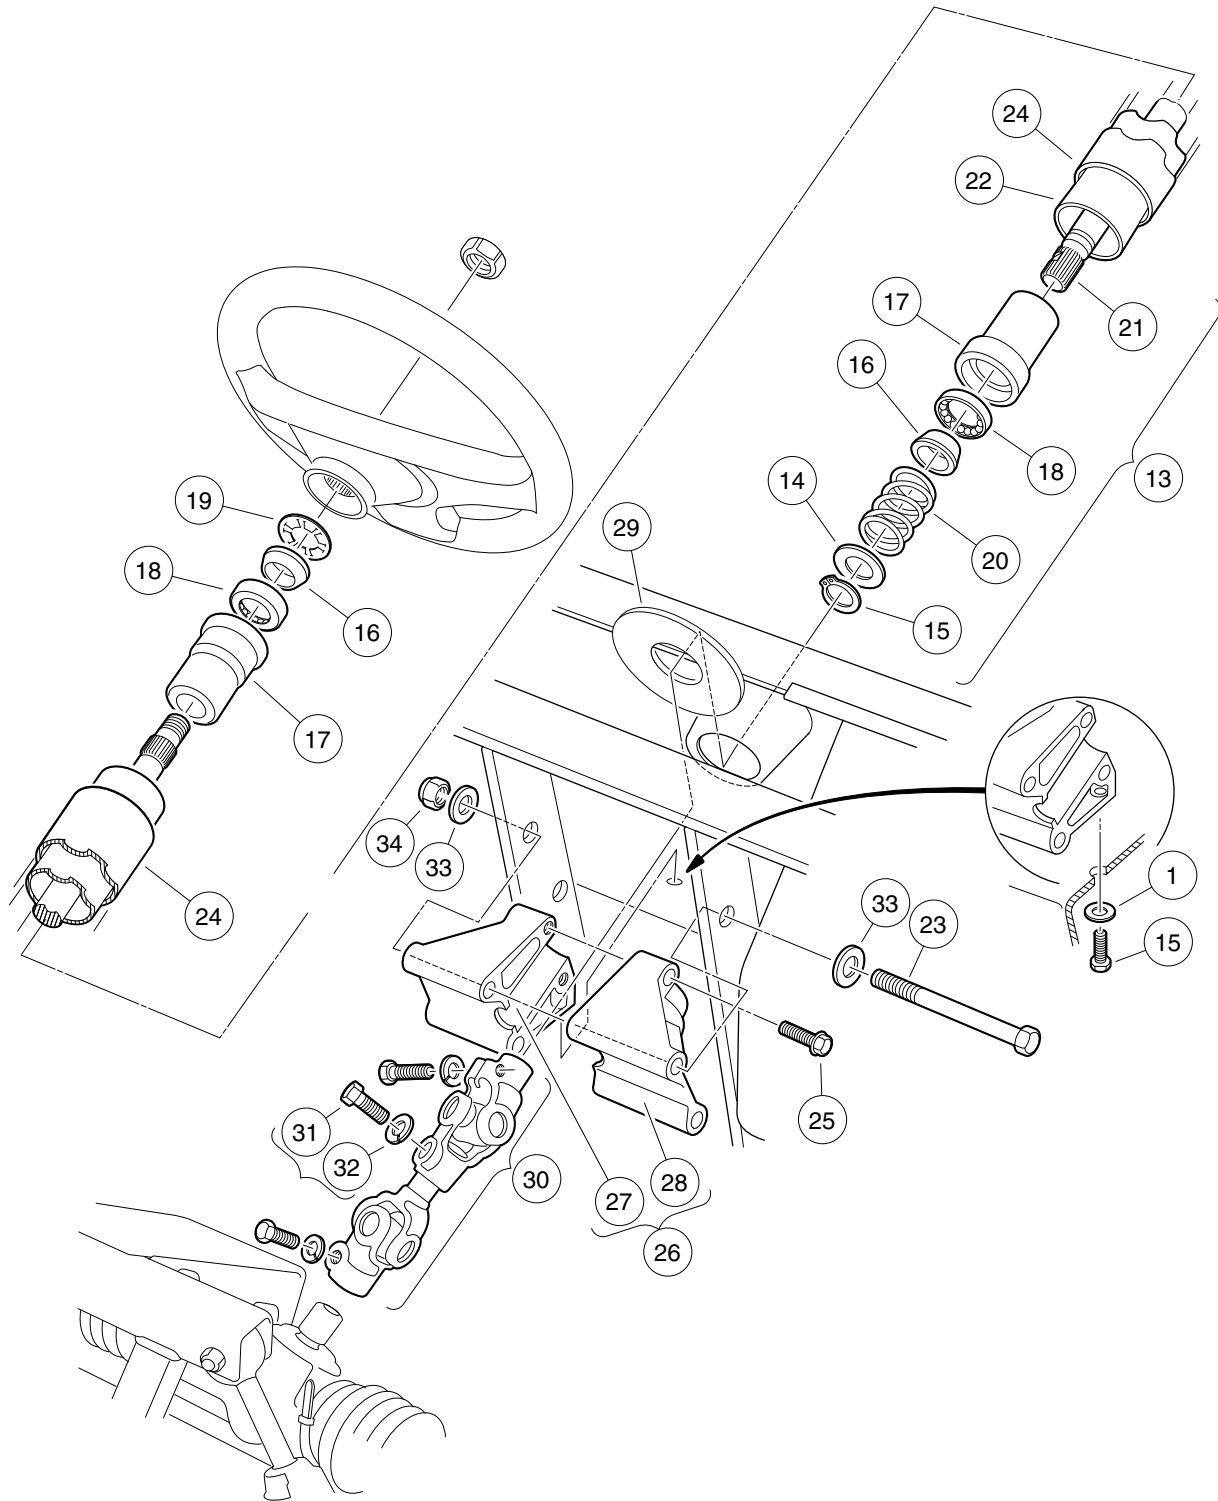

000247-002

# STEERING COLUMN

ITEM	PART NO.	DESCRIPTION	QTY
		<b>1 2 3 4</b>	
1	1011697	Washer, 5/16 Flat .....	1
2	1014216	Steering Column Rebuild Kit (includes items 3 through 11) .....	1
3	1012466	Dust Cover .....	1
4	1012605	Ring, 0.579 Internal Retaining .....	1
5	1014125	Wedge, Molded .....	2
6	1014126	Seat, Plastic Bearing .....	2
7	1014211	Seal, Bearing .....	1
8	1014212	Spacer, Shaft .....	1
9	1014213	Bearing, Ball .....	2
10	1014214	Ring, Retaining .....	1
11	1014217	Spring, Steering Shaft .....	1
12	1014288	Screw, 5/16-18 X 0.75 Thread-Forming .....	1
13	1016181	Steering Shaft Assembly (includes items 14 through 22) .....	1
14	1012604	Washer, 0.675 ID X 1.19 OD .....	1
15	1012605	Ring, 0.579 Internal Retaining .....	1
16	1014125	Wedge, Molded .....	2
17	1014126	Seat, Plastic Bearing .....	2
18	1014213	Bearing, Ball .....	2
19	1014214	Ring, Retaining .....	1
20	1014217	Spring, Steering Shaft .....	1
21	1015545	Shaft, Steering Column .....	1
22	1016622	Column, Aluminum Steering .....	1
23	1016183	Screw, 3/8-16 X 7.00 Hex Cap .....	2
24	1016263	Cover, Steering Column Tube .....	1
25	1016269	Screw, 5/16-18 Thrd Forming .....	2
26	101984801	Kit, Steering Column Mounting Bracket (includes items 27 and 28) .....	1
27	N/A	Bracket, RH Steering Column Mount .....	1
28	N/A	Bracket, LH Steering column mount .....	1
29	102278001	Boot, Steering Column Round .....	1
30	103601601	Shaft, Intermediate Steering (includes items 31 and 32) .....	1
31	1017226	Bolt, Hex-Head, 8mm X 1.25 - 30 .....	3
32	7174	Lockwasher, 5/16 Split .....	3
33	334	Washer, 3/8 Type A Flat .....	4
34	8754	Locknut, 3/8-16 Hex .....	2

**5**  
**G**  
**E**