



Deluxe Grab Bar

Installation Instructions




Grab Bar

Dacromet Hardware Pack

- 4 - 8mm x 40mm Hex Bolts
- 8 - 8mm Lock Washers
- 8 - 8mm Flat Washers

Trailer Hitch (compatible with Grab Bar)

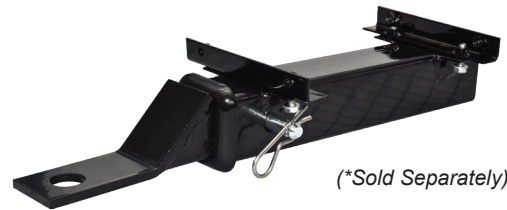

(*Sold Separately)

Note: This Grab Bar is designed to fit on both Steel & Plastic GTW Footrests. Other manufacturers Footrests may require drilling.


1

Switch key to the OFF position and engage the Parking Brake.



2
Locate the four pre drilled holes in your GTW rear seat footrest (2 at the front and 2 on the back).


The Grab Bar will mount the same to both Footrests.

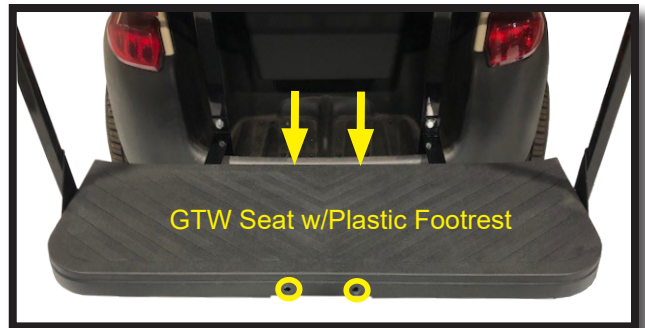

Tool Required: 13mm Socket or Wrench

3
Using the supplied 8x40mm Hex Head bolts, lock washers, & flat washers, attach the **Grab Bar** to the footrest.

Once all four bolts are in place, then tighten.

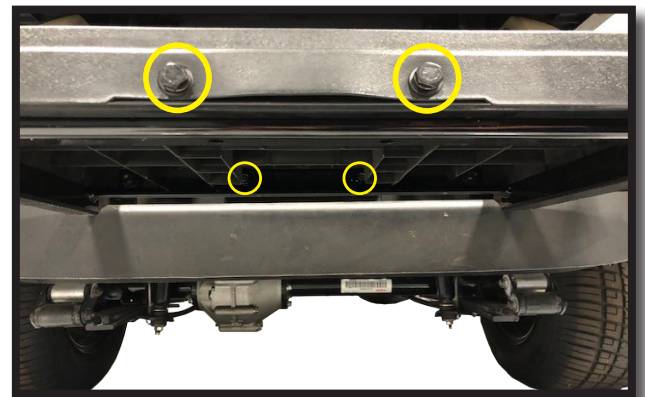

4
Tool Required: 13mm Socket or Wrench

To install the GTW Trailer Hitch on the Grab Bar, use the hardware provided with the Trailer Hitch and attach it to the Grab Bar as shown.



*Grab Bar shown off of cart for instructional purposes only.

