


### REAR VIEW MIRROR For Polaris Ranger XP 900

#### Parts Included:

1. Rear View Mirror Assembly
2. Mirror Arm
3. Lower Mounting Bracket
4. Upper Mounting Bracket
5. M8 Socket Head Bolt

#### Tools needed for installation:

- 6mm Allen wrench or socket
- 8mm wrench

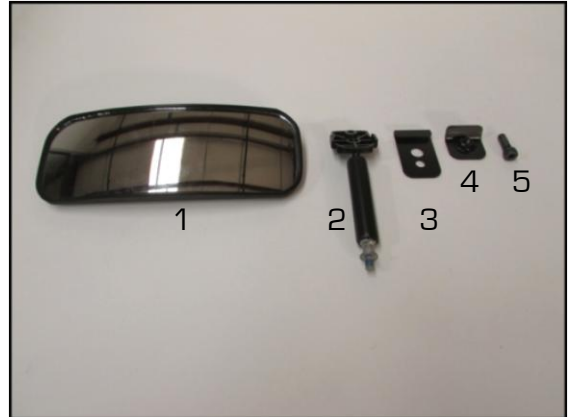

1. Thread mounting arm into mirror and tighten with 8mm wrench.



2. Place upper and lower mounting brackets on mirror arm as shown. Install 8mm bolt but do not tighten yet.



3. Slip brackets over upper windshield lip.



4. Tighten bolt using 6mm allen wrench.